Sec. 9

JACK NUT® INSTALLATION TOOLS



Part No. 14156 Friction Wrench



For use when installing a limited quantity of Jack Nuts. Insert the wrench between the screw and the head of the fastener, hold wrench and run in screw to set Jack Nut.

UNIT PACKAGE: 10

Jacknut® Installation Rods Use w/14157 Installation Tool



Auveco Part No.	Unit Pkg.	Thread
16856	1	6-32
14158	1	10-24
14159	1	1/4-20
14160	1	4mm
14161	1	5mm
14162	1	6mm



Mirror Mounting Screws And Jack Nuts

For additional information refer to listings on pages 25, 26 and 52.

Auveco Part No.	Description	Unit Pkg.
13231	1/4-20 x 7/8" Screw (Phos.)	25
13232	1/4-20 x 7/8" Screw (Phos) & Jack Nut	® 25
14947	M6 x 26mm Screw (Chrome)	25
14976	1/4-20 x 1-1/4" Screw (Stainless Steel)	25
14977	1/4-20 x 1-1/4" Screw (Stainless Steel)	10
	& Jack Nut®	
17179	1/4-20 x 1-1/4" Screw (Phos. Organic)	25

Square Head Plastic Expansion Nut Use with #8 or #10 Tapping Screws



				Square	
Part No.	Height	Length	Width	Panel Hole	Pkg.
11308	.500	.305	.25	.250281	50

Square Head Nylon Push-In Nut



Diameter 3/8" Thickness .025/.035

Auveco Part No.	Thread Size	Hole Size Square	Panel Range	Unit Pkg.
10305	#8	.265/.292	.030/.160	50

